

FRONT WINGLETS

FOR KTM 990 RC R

Front fairing preparation - removal sequence





BEFORE YOU START

Keep all original fasteners organised by location for reassembly.

01 REMOVE THE MIRRORS

Remove the mirror fasteners indicated by the red arrows.

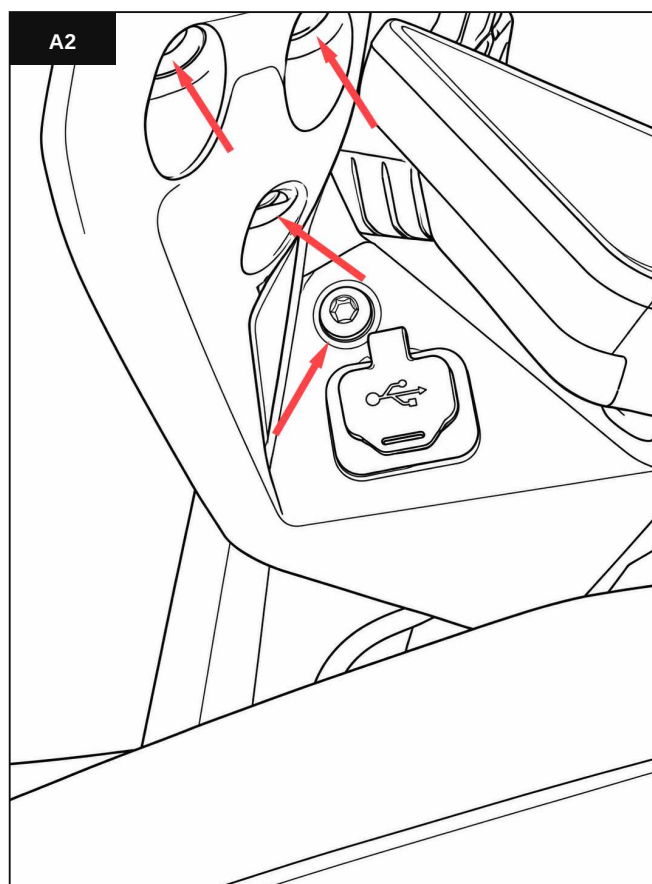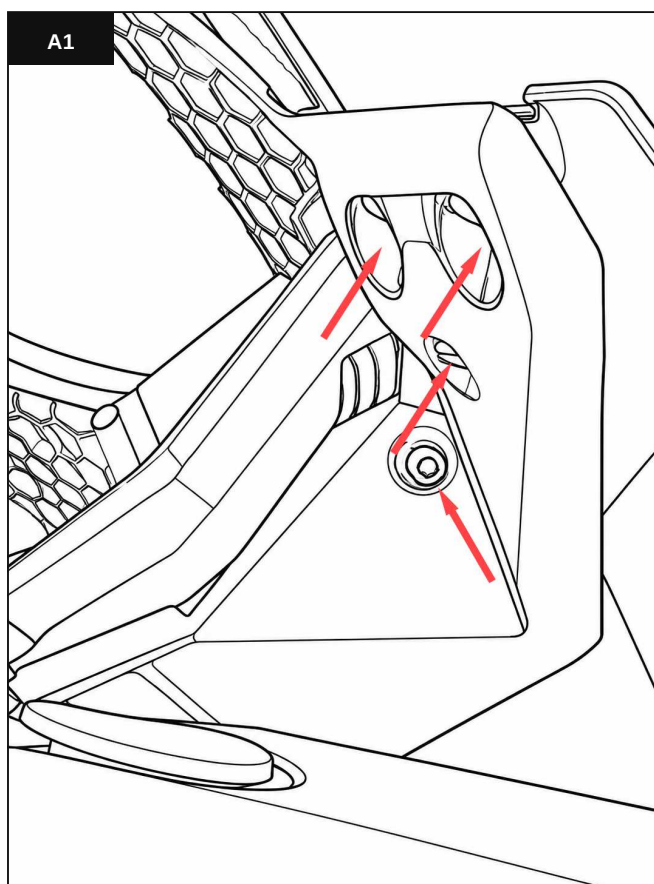

ACTION

8 SCREWS


EN Remove the 8 indicated screws, then remove both mirrors.

FR Retirez les 8 vis indiquées, puis retirez les deux rétroviseurs.

IT Rimuovere le 8 viti indicate, quindi rimuovere entrambi gli specchietti.

02 REMOVE THE SIDE FASTENERS

Remove the fasteners indicated by the red arrows on both sides.

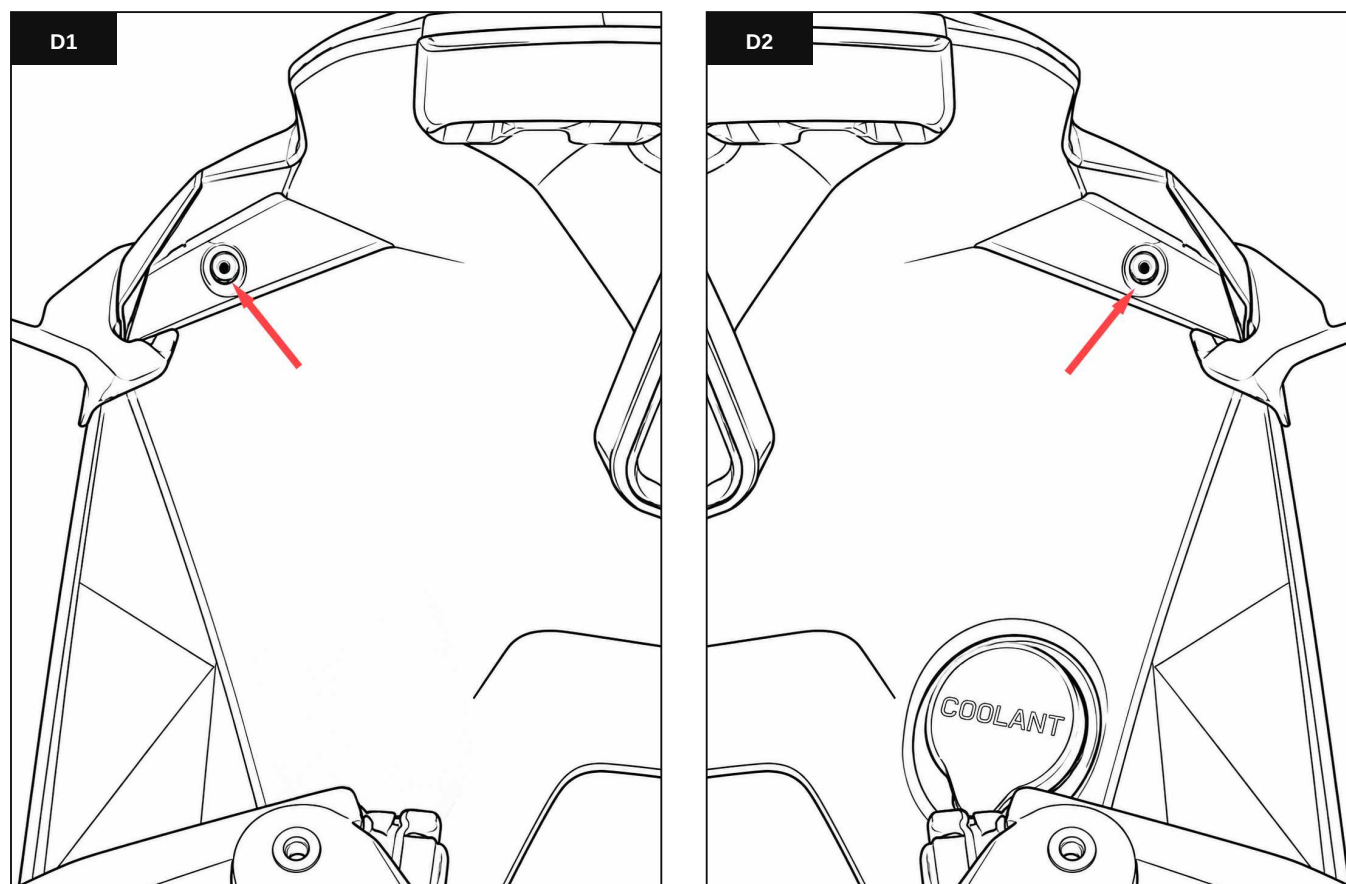

ACTION

2 SCREWS



EN Remove the highlighted screws before removing the windscreen.

FR Retirez les vis indiquées avant de retirer la bulle.

IT Rimuovere le viti indicate prima di rimuovere il cupolino.

03 REMOVE THE WINDSCREEN

Remove the windscreen, then release the remaining upper fairing screws.

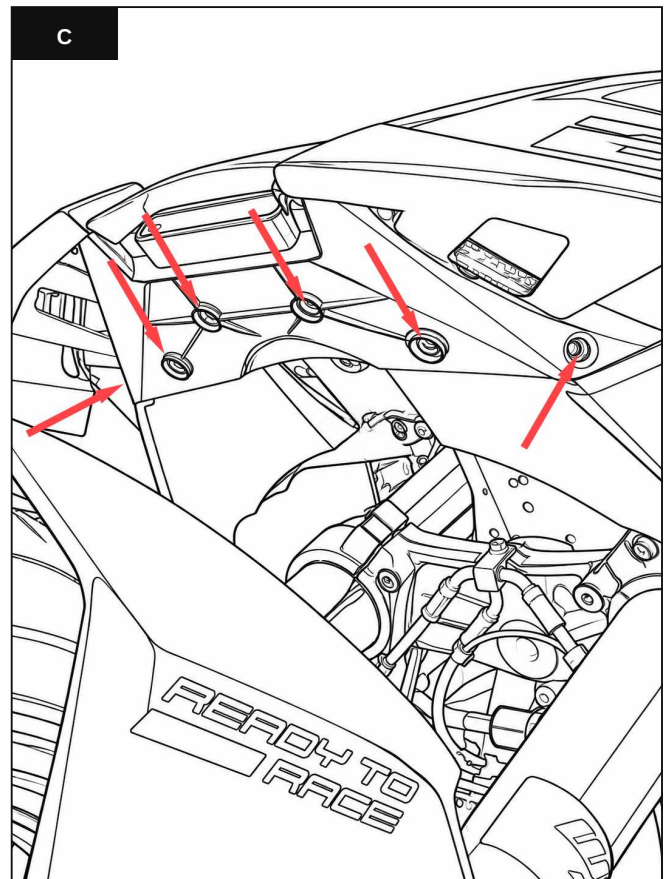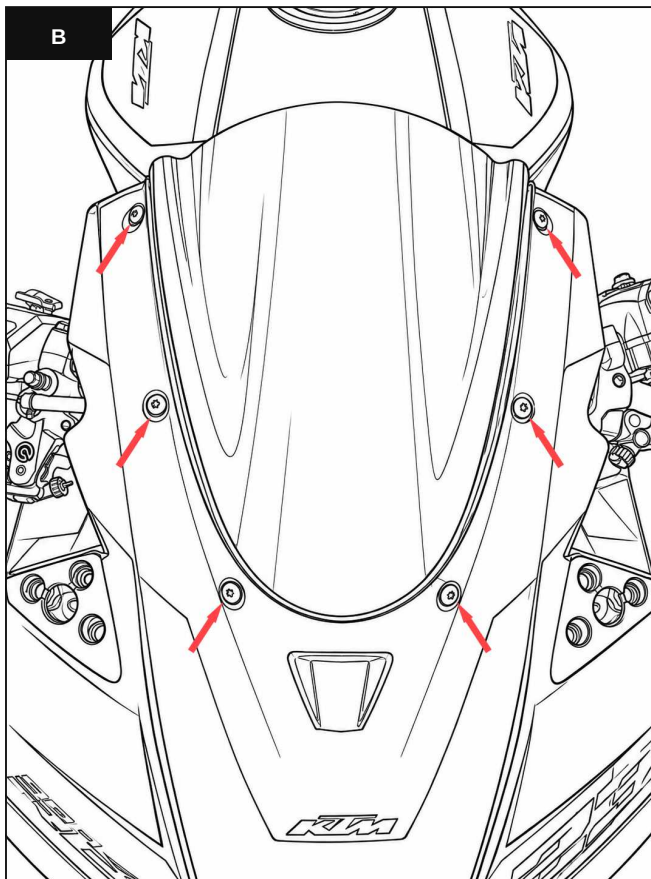

ACTION

12 SCREWS


EN Remove the 6 windscreen screws and windscreen, then remove the 6 indicated screws.

FR Retirez les 6 vis de la bulle et la bulle, puis retirez les 6 vis indiquées.

IT Rimuovere le 6 viti del cupolino e il cupolino, quindi rimuovere le 6 viti indicate.

04 DISCONNECT THE DRL

Pull the windscreen straight forward to release it from the motorcycle.

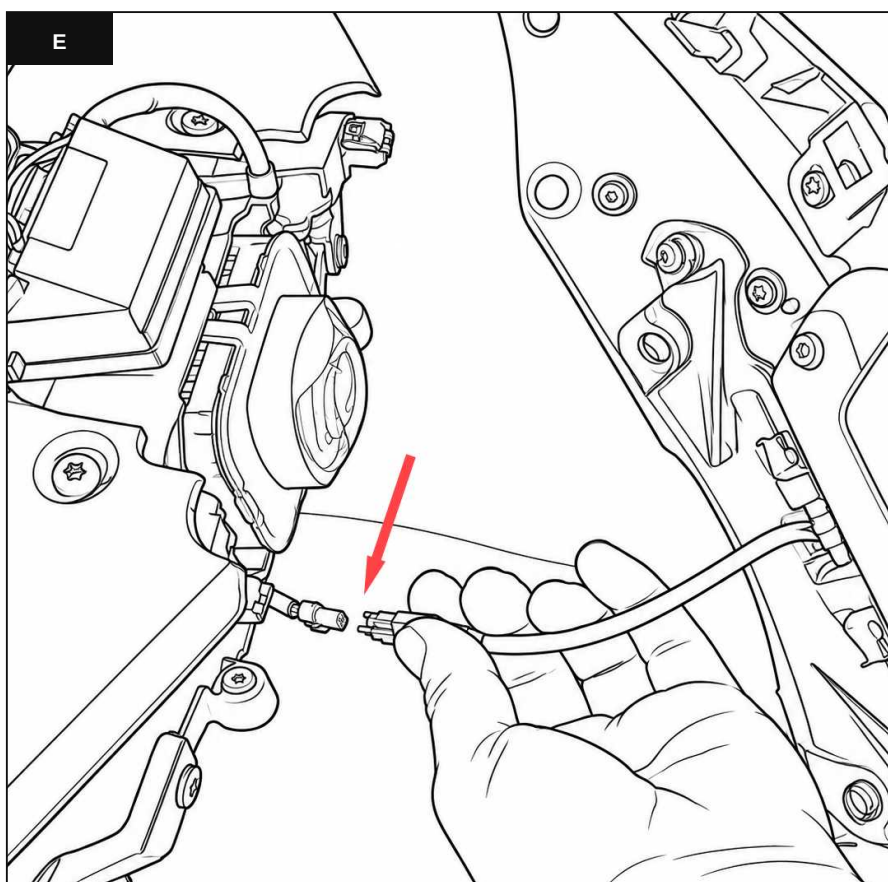



ACTION

DRL

- | | |
|----|---|
| EN | Pull the windscreen forward carefully. Do not strain the wire; disconnect the DRL connector. |
| FR | Tirez la bulle vers l'avant avec précaution. Ne forcez pas sur le câble ; débranchez le connecteur DRL. |
| IT | Tirare il cupolino in avanti con cautela. Non tirare il cavo; scollegare il connettore DRL. |

05 REMOVE THE OEM WINGLETS

Remove the original winglets before fitting the MATERIA components.

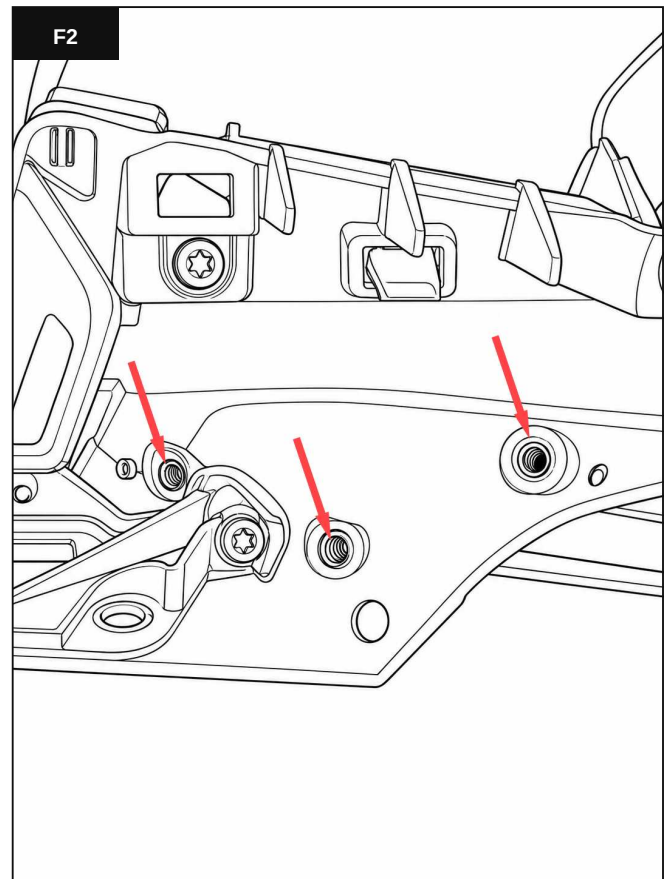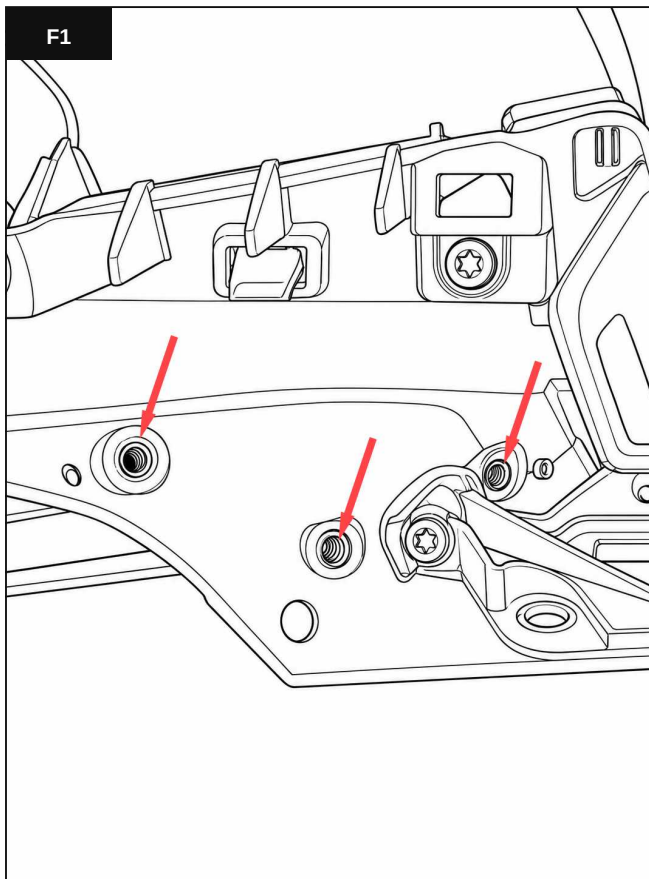

ACTION

6 SCREWS



EN Remove the 3 screws on each side to remove the original (OEM) winglets.

FR Retirez les 3 vis de chaque côté pour déposer les winglets d'origine (OEM).

IT Rimuovere le 3 viti per lato per rimuovere le winglet originali (OEM).

06 REMOVE THE 3M ADHESIVE LINER

Remove the protective liner from the 3M double-sided adhesive.

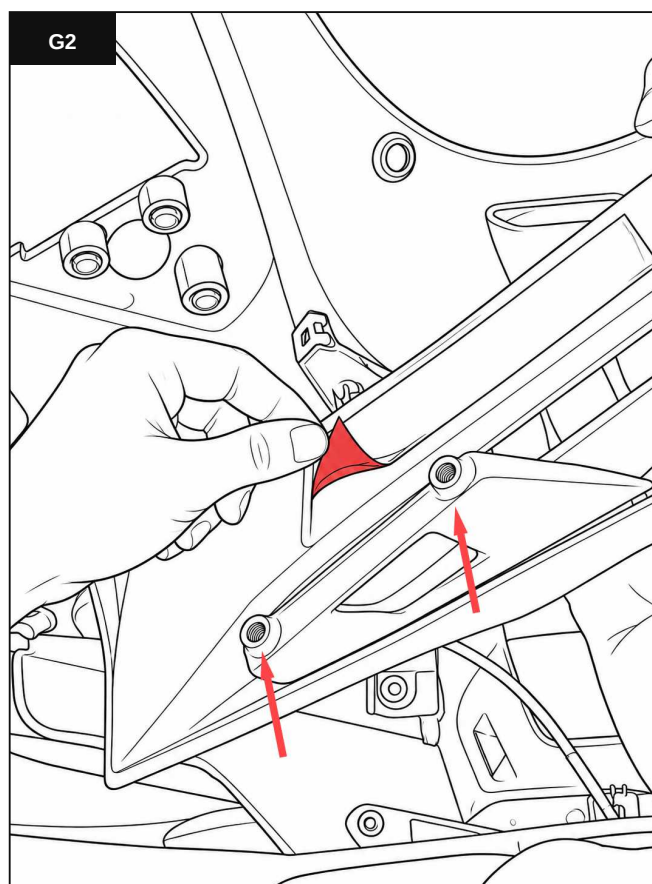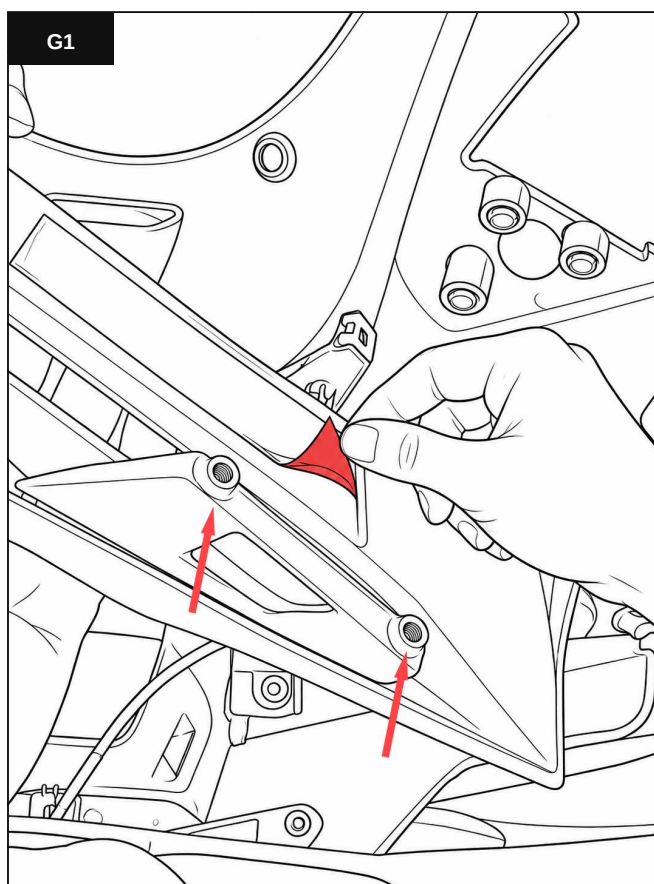

ACTION

3M ADHESIVE



EN Peel off the protective liner from the 3M double-sided adhesive.

FR Retirez le film protecteur de l'adhésif double face 3M.

IT Rimuovere la pellicola protettiva dal biadesivo 3M.

07 INSTALL THE MATERYA WINGLETS

Position the MATERYA winglets and secure them with the supplied screws.

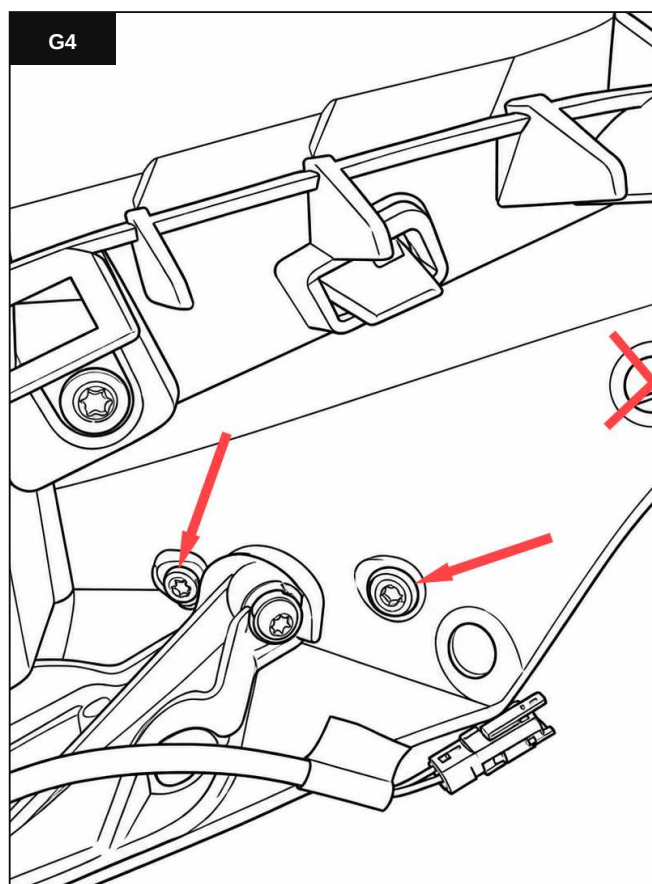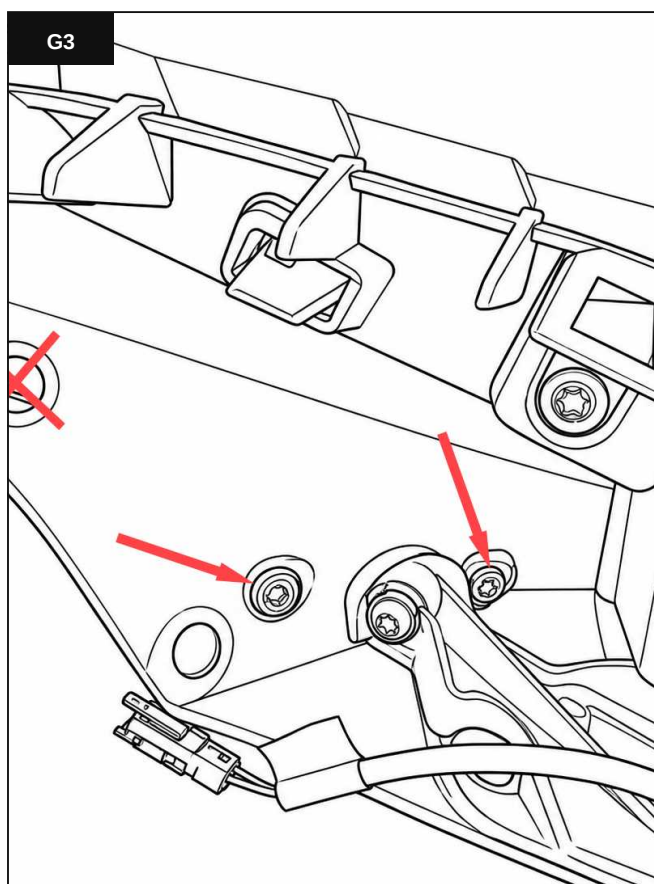


ACTION

4 SCREWS

- | | |
|-----------|--|
| EN | Position the winglets and install the 2 supplied screws on each side. |
| FR | Positionnez les winglets et installez les 2 vis fournies de chaque côté. |
| IT | Posizionare i winglet e installare le 2 viti in dotazione per lato. |

08 INSTALL THE REAR PLATE

Position the plate behind the windscreen, aligned with the holes beside the main headlight.

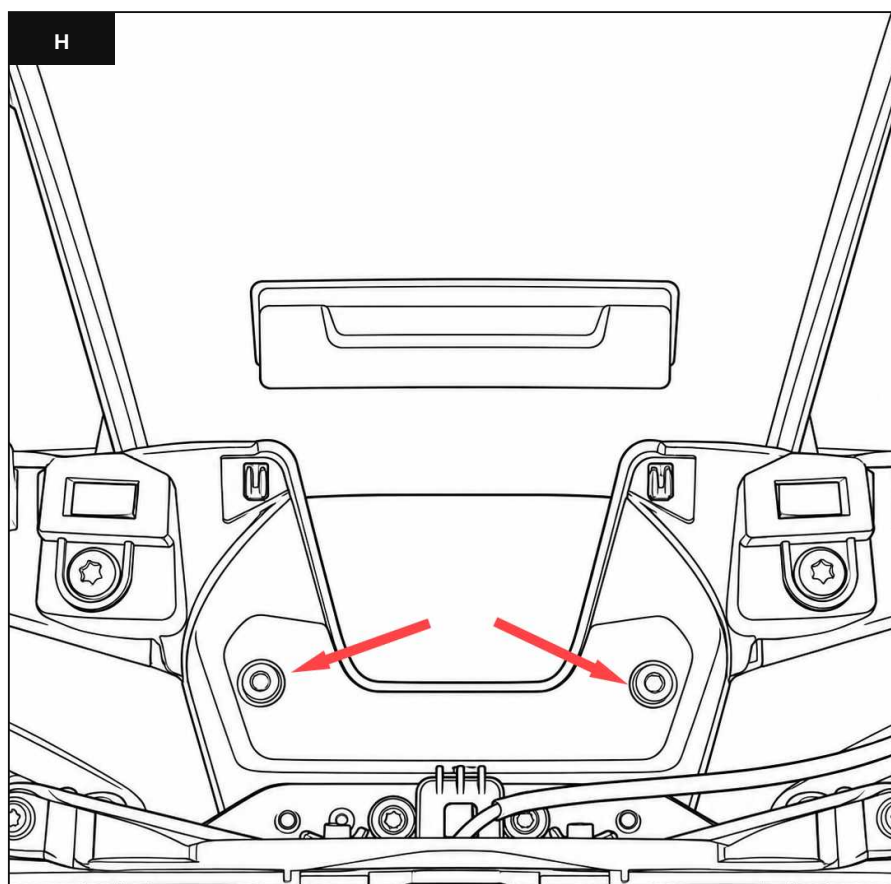



ACTION

M5 SCREWS

- | | |
|----|--|
| EN | Insert the supplied M5 screws through the plate and into the two side-winglet mounts. |
| FR | Insérez les vis M5 fournies dans la plaque et les deux fixations latérales des winglets. |
| IT | Inserire le viti M5 in dotazione nella piastra e nei due fissaggi laterali dei winglet. |

09 INSTALL THE CENTER COVER

Position the center cover over the two screws and tighten moderately.

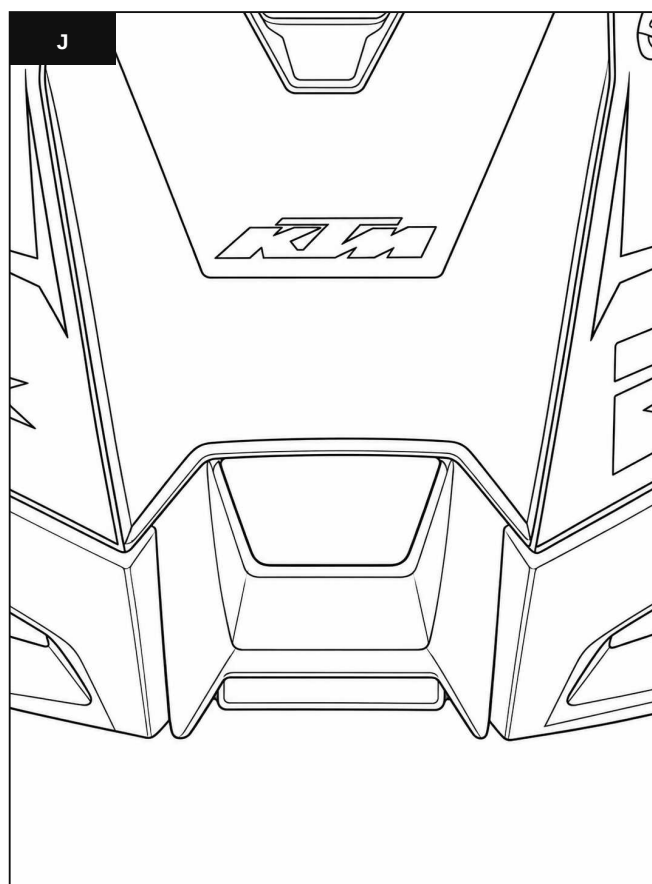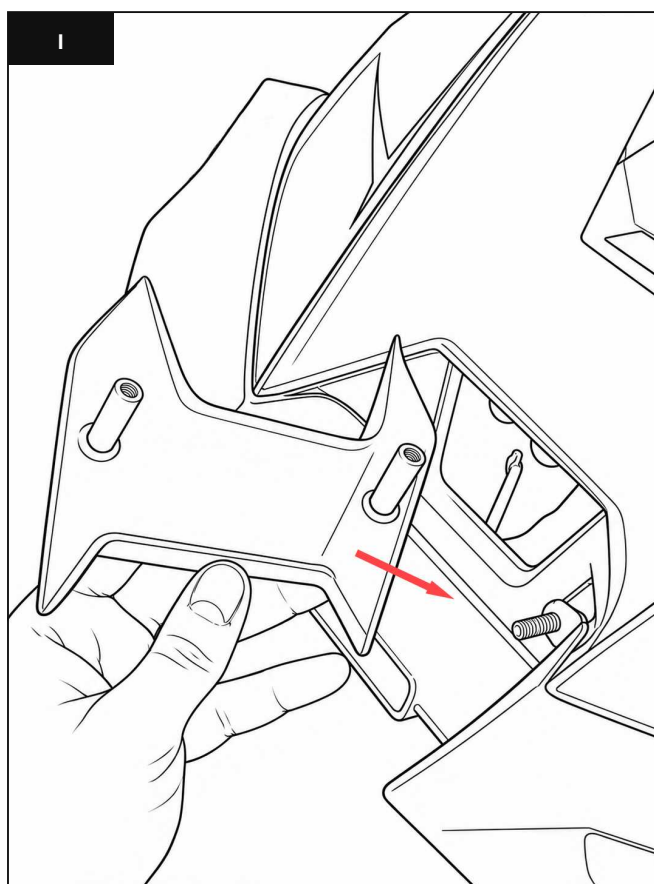

ACTION

2 SCREWS


EN Position the center cover over the two screws and tighten them moderately.

FR Positionnez le cache central sur les deux vis et serrez-les modérément.

IT Posizionare il cover centrale sulle due viti e serrarle moderatamente.

04 RECONNECT THE DRL AND REFIT THE WINDSCREEN

Reconnect the DRL connector before refitting the windscreen.

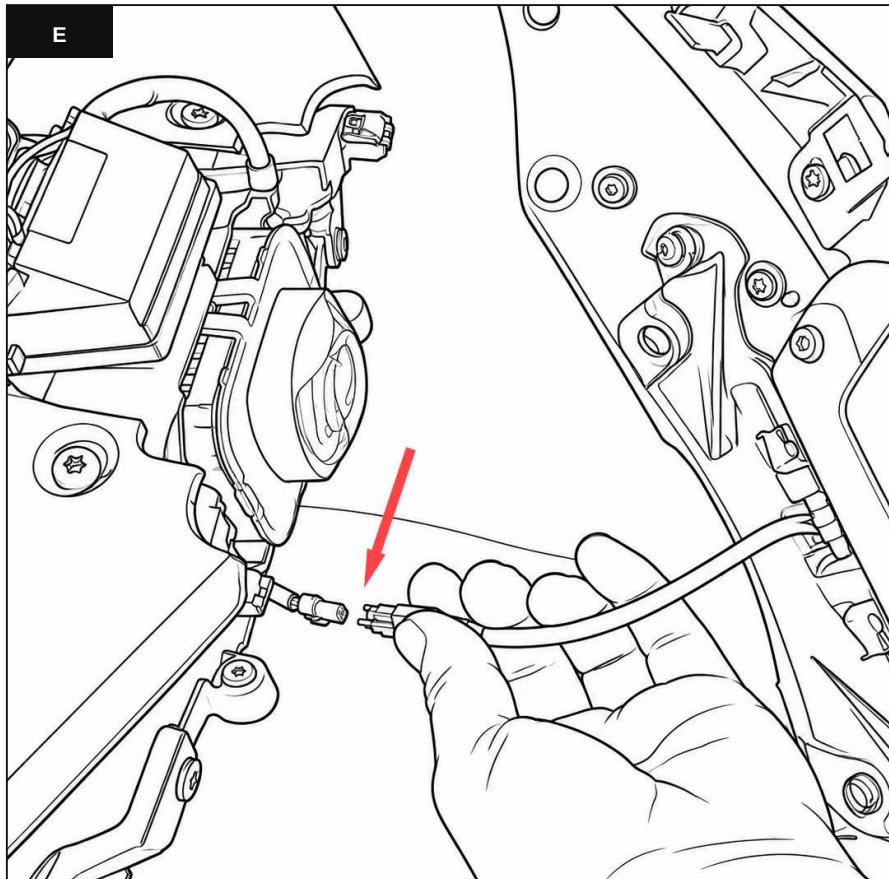



ACTION

DRL

- | | |
|----|--|
| EN | Reconnect the DRL connector, then refit the windscreen carefully without straining the wire. |
| FR | Rebranchez le connecteur DRL, puis remettez la bulle en place sans forcer sur le câble. |
| IT | Ricollegare il connettore DRL, quindi rimontare il cupolino senza tendere il cavo. |

03 REFIT THE WINDSCREEN FASTENERS

Refit the windscreen and secure the surrounding fasteners.

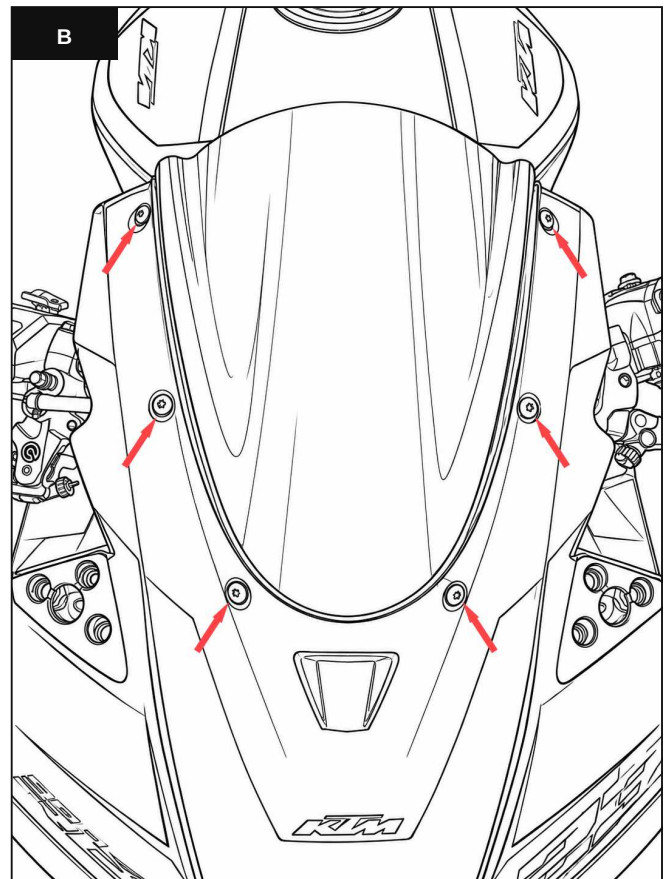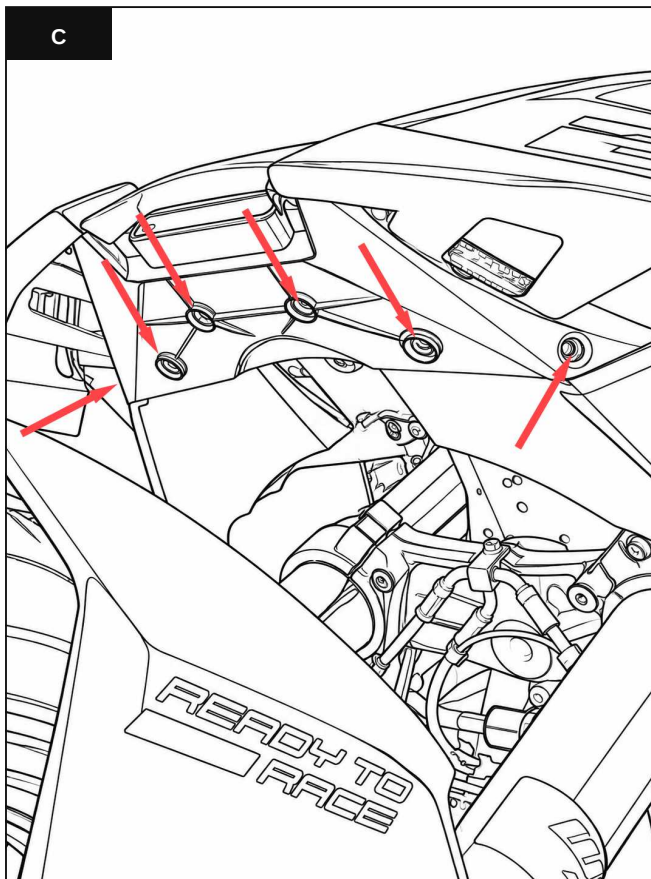


ACTION

12 SCREWS

- | | |
|----|---|
| EN | Refit the 6 indicated screws, then install and tighten the 6 windscreen screws. |
| FR | Remettez les 6 vis indiquées, puis installez et serrez les 6 vis de la bulle. |
| IT | Rimontare le 6 viti indicate, quindi installare e serrare le 6 viti del cupolino. |

02 REFIT THE SIDE FASTENERS

Refit the side fasteners removed during disassembly.

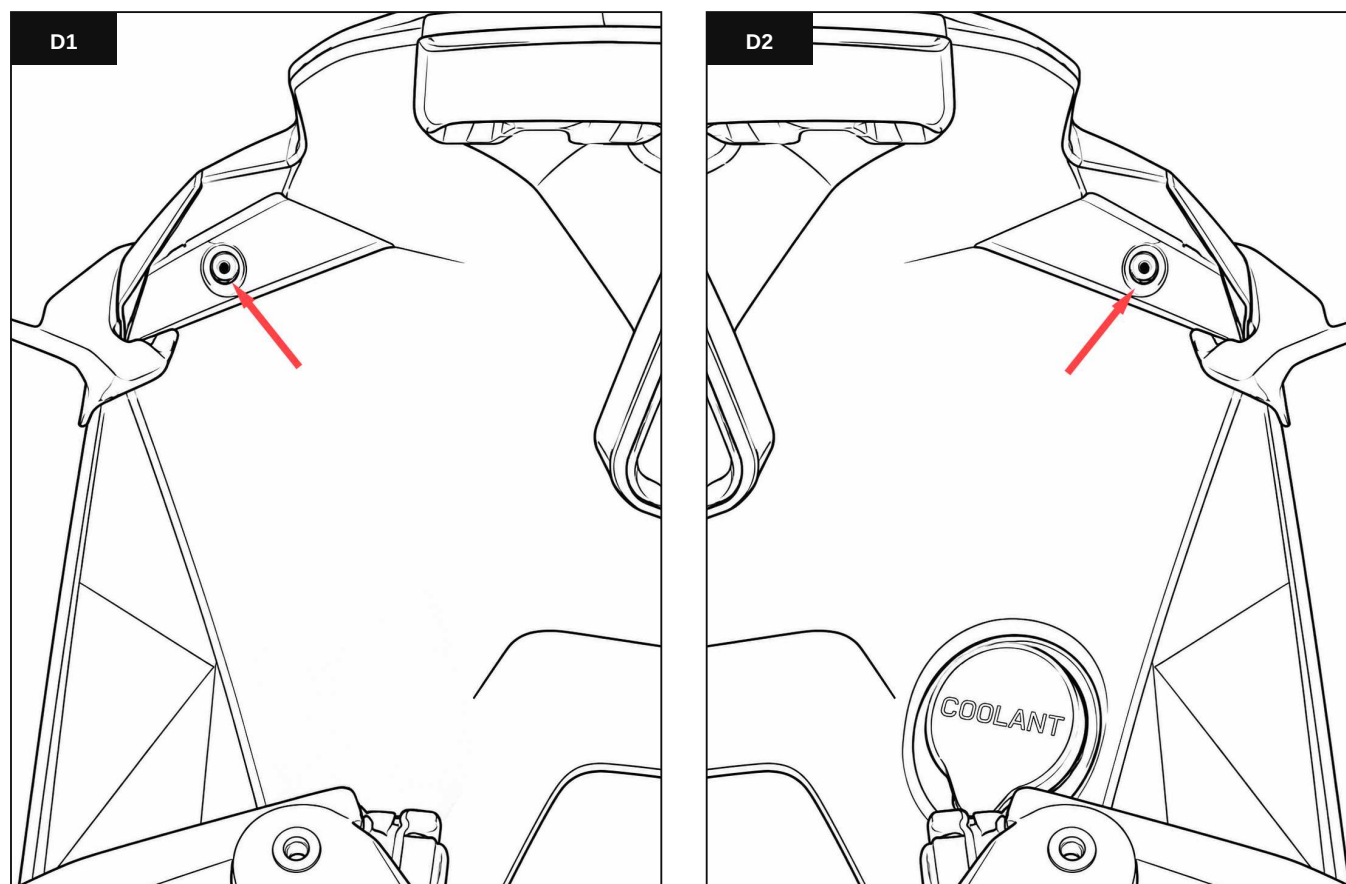

ACTION

2 SCREWS



EN Install and tighten the highlighted screws on both sides.

FR Installez et serrez les vis indiquées des deux côtés.

IT Installare e serrare le viti indicate su entrambi i lati.

01 REFIT THE MIRRORS

Refit both mirrors and secure them with the original fasteners.

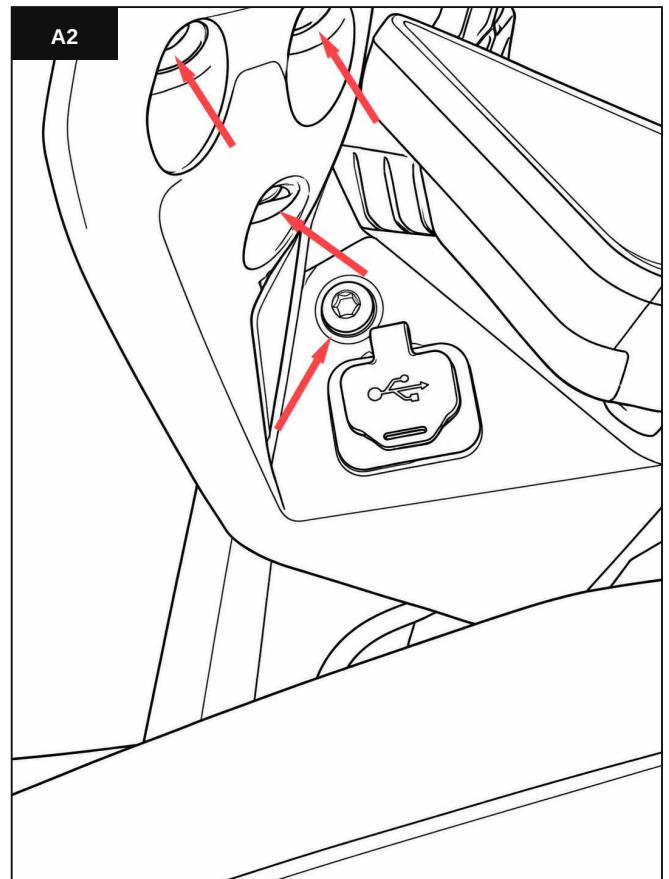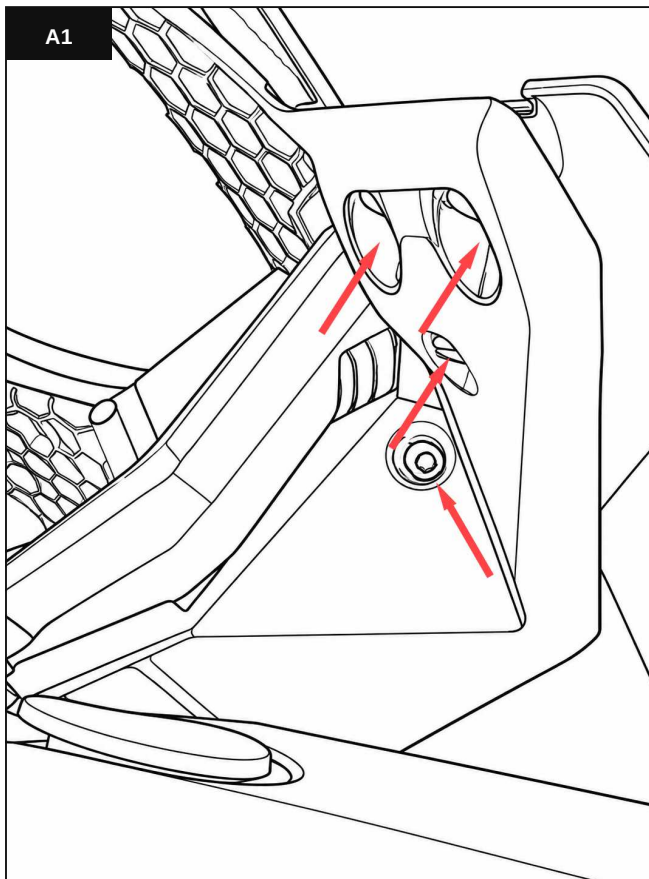

ACTION

8 SCREWS

EN Position both mirrors and tighten the 8 original screws.

FR Positionnez les deux rétroviseurs et serrez les 8 vis d'origine.

IT Posizionare entrambi gli specchietti e serrare le 8 viti originali.